

# FirmTek

Store and Share your Digital Creations

## Quick Install - SeriTek/Q6G or SeriTek/6G2+2 in ThunderTek/PX

### I. Package Contents



Four  
Rubber  
Feet



Two  
Screws  
Secure  
PCBA to  
Posts




**ThunderTek/PX2+2  
Includes Two  
Posts**



Two  
Screws  
Secure  
Posts to  
Housing



Screws  
Secure  
PCIe to  
Housing

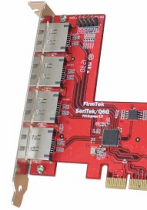

**ThunderTek/PX-  
Q6G includes  
SeriTek/Q6G**



**ThunderTek/PX2+2  
includes  
SeriTek/6G2+2**

### II. Install SeriTek/Q6G in ThunderTek/PX

1. Mount Rubber Feet in suggested locations.

2. Remove Top Housing:

Remove three screws on each side of  
ThunderTek/PX

3. Loosen screw and remove PCI Mounting Tab

4. Install SeriTek/Q6G Card:

- Insert adapter bracket into PCIe Tab Slot and push Gold Teeth into PCIe slot
- Gently press PCIe adapter to verify card is firmly seated in PCIe slot


Note: Hold the PCIe card by its edges only. Do NOT touch Gold Teeth or any components on the card.

5. Reinstall PCI Mounting Tab


- Position & Place PCI Mounting Tab into housing. Verify both holes align properly
- Tighten screw to secure the PCI Mounting Tab to housing
- Tighten screw to secure Card to Mounting Tab

6. Reinstall Top Housing



- Attach Top Cover and secure with six screws

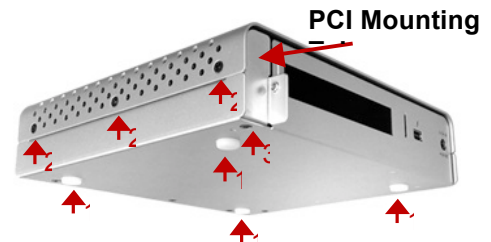

PCI Mounting

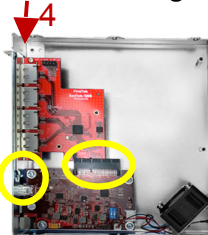

Card Firmly Seated

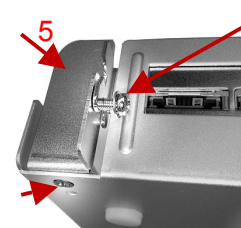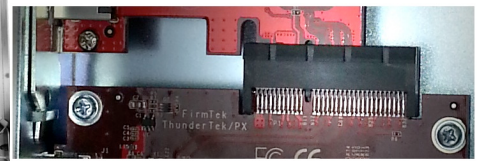

Tighten Screw to  
Secure Tab

Tighten Screw to  
Secure Adapter

### III. Install SeriTek/6G2+2 in ThunderTek/PX

**1. Mount Rubber Feet in suggested locations.**



**2. Remove Top Housing:**

Unscrew three screws on each side of ThunderTek/PX

**3. Loosen screw and remove PCI Mounting Tab**

**4. Screw Posts to Bottom Chassis**

- Insert screw (Flat Head) from bottom of chassis
- Tighten Post: Use finger to press on Flat Head Screw while other hand turns Post until tight
- Repeat the same steps for the 2nd Post

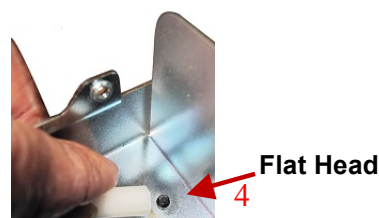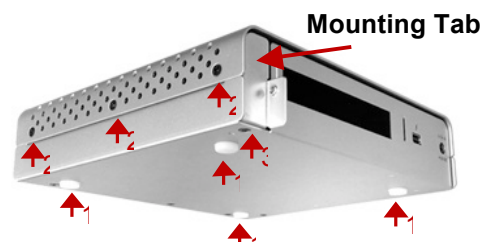


**5. Install SeriTek/6G2+2 Card:**

- Install drive(s) on SeriTek/6G2+2
- Insert adapter bracket into PCIe Tab Slot and firmly push Gold Teeth into PCIe slot
- Gently press PCIe adapter to verify card is seated properly in PCIe slot


**Note:** Hold PCIe card by its edges only. Do NOT touch Gold Teeth or any components on the card.

- Screw SeriTek/6G2+2 to Posts

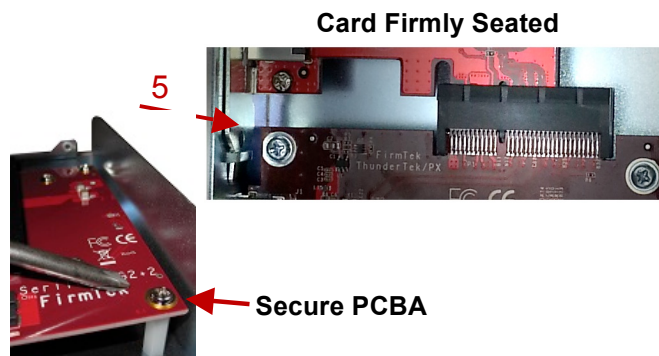

**6. Reinstall PCI Mounting Tab**

- Position & Place PCI Mounting Tab into housing. Verify both holes align
- Tighten screw to secure PCI Mounting Tab to housing
- Tighten screw to secure Card to Mounting Tab

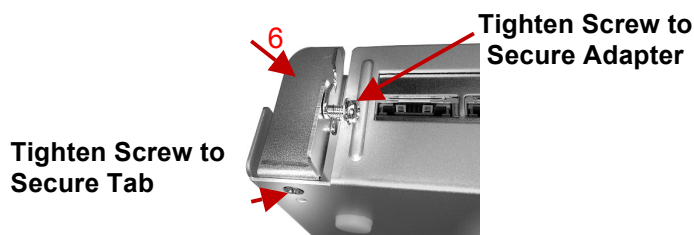

**7. Reinstall the Top Housing**

- Attach Top Cover and secure with six screws